TOP AND CONSOLE PARTS

For Model: TEDX640PQ1
(Designer White)

29"ELECTRIC
DRYER

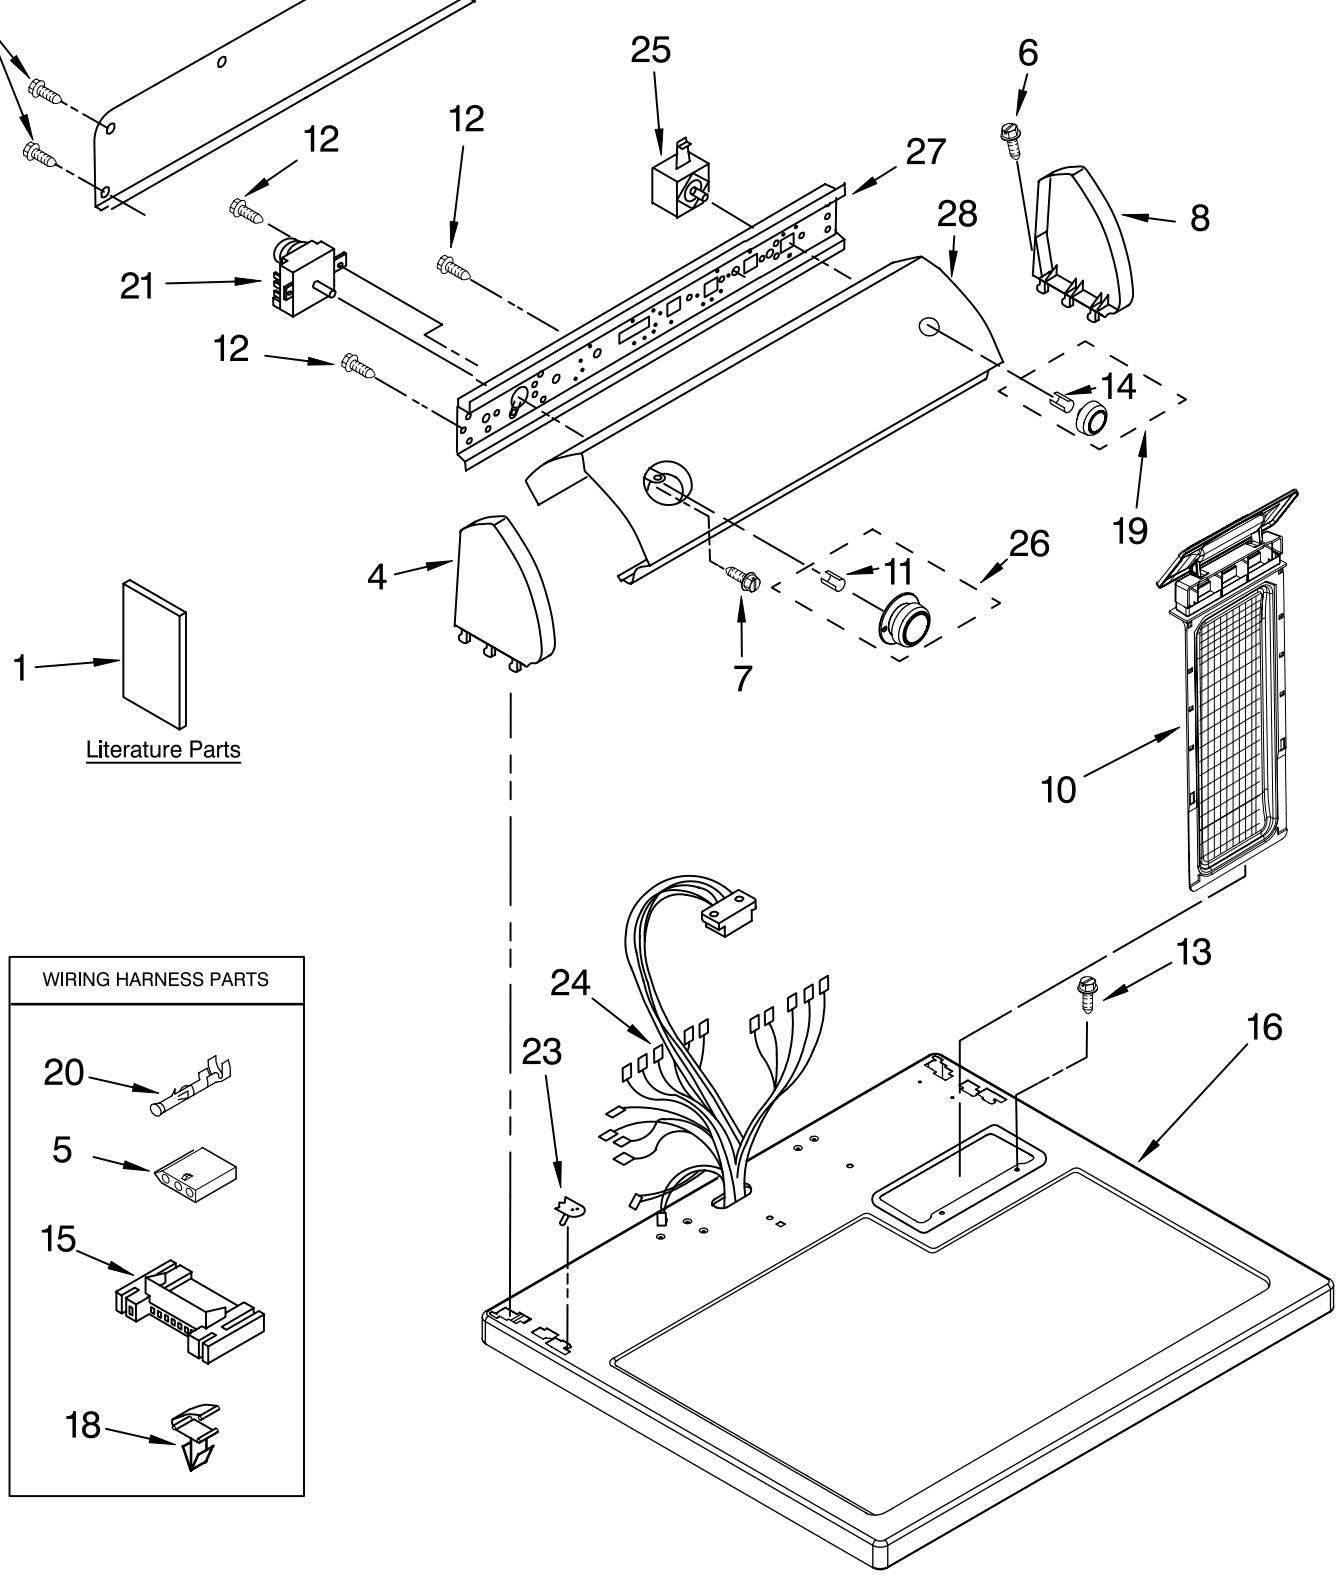

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Model: TEDX640PQ1
(Designer White)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8578193	Guide, Use & Care
	8577187	Instructions, Installation
	8533781	Sheet, Cycle Feature
	8528187	Wiring Diagram

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

	677818	Dryer

Illus. No.	Part No.	DESCRIPTION
2	693995	Screw, Hex Head
4	8274437	Cap, End (L.H.)
5	3936144	Connector
6	388326	Screw, Console
7	8533951	Screw, Grounding
8	8274434	Cap, End (R.H.)
9	8274261	Panel, Rear Console
10	8558467	Screen, Lint
11	688805	Clip
12	8533971	Screw, 8−18 x 5/16
13	688983	Screw, 8−18 x 5/8
14	8536939	Clip, Spring
15	3395683	Connector (Motor)

Illus. No.	Part No.	DESCRIPTION
16	8557930	Top
18	3394427	Clip, Harness
19	8557462	Knob, Push−To−Start
20	94614	Terminal
21	8299781	Timer, 60 Hz.
23	357213	Nut, Push−In (2)
24	8299867	Harness, Wiring
25	3977456	Switch, Push−To−Start
26	8557456	Timer Knob Assembly
27	8271418	Bracket, Control
28	3977947	Panel, Control

CABINET PARTS

For Model: TEDX640PQ1
(Designer White)

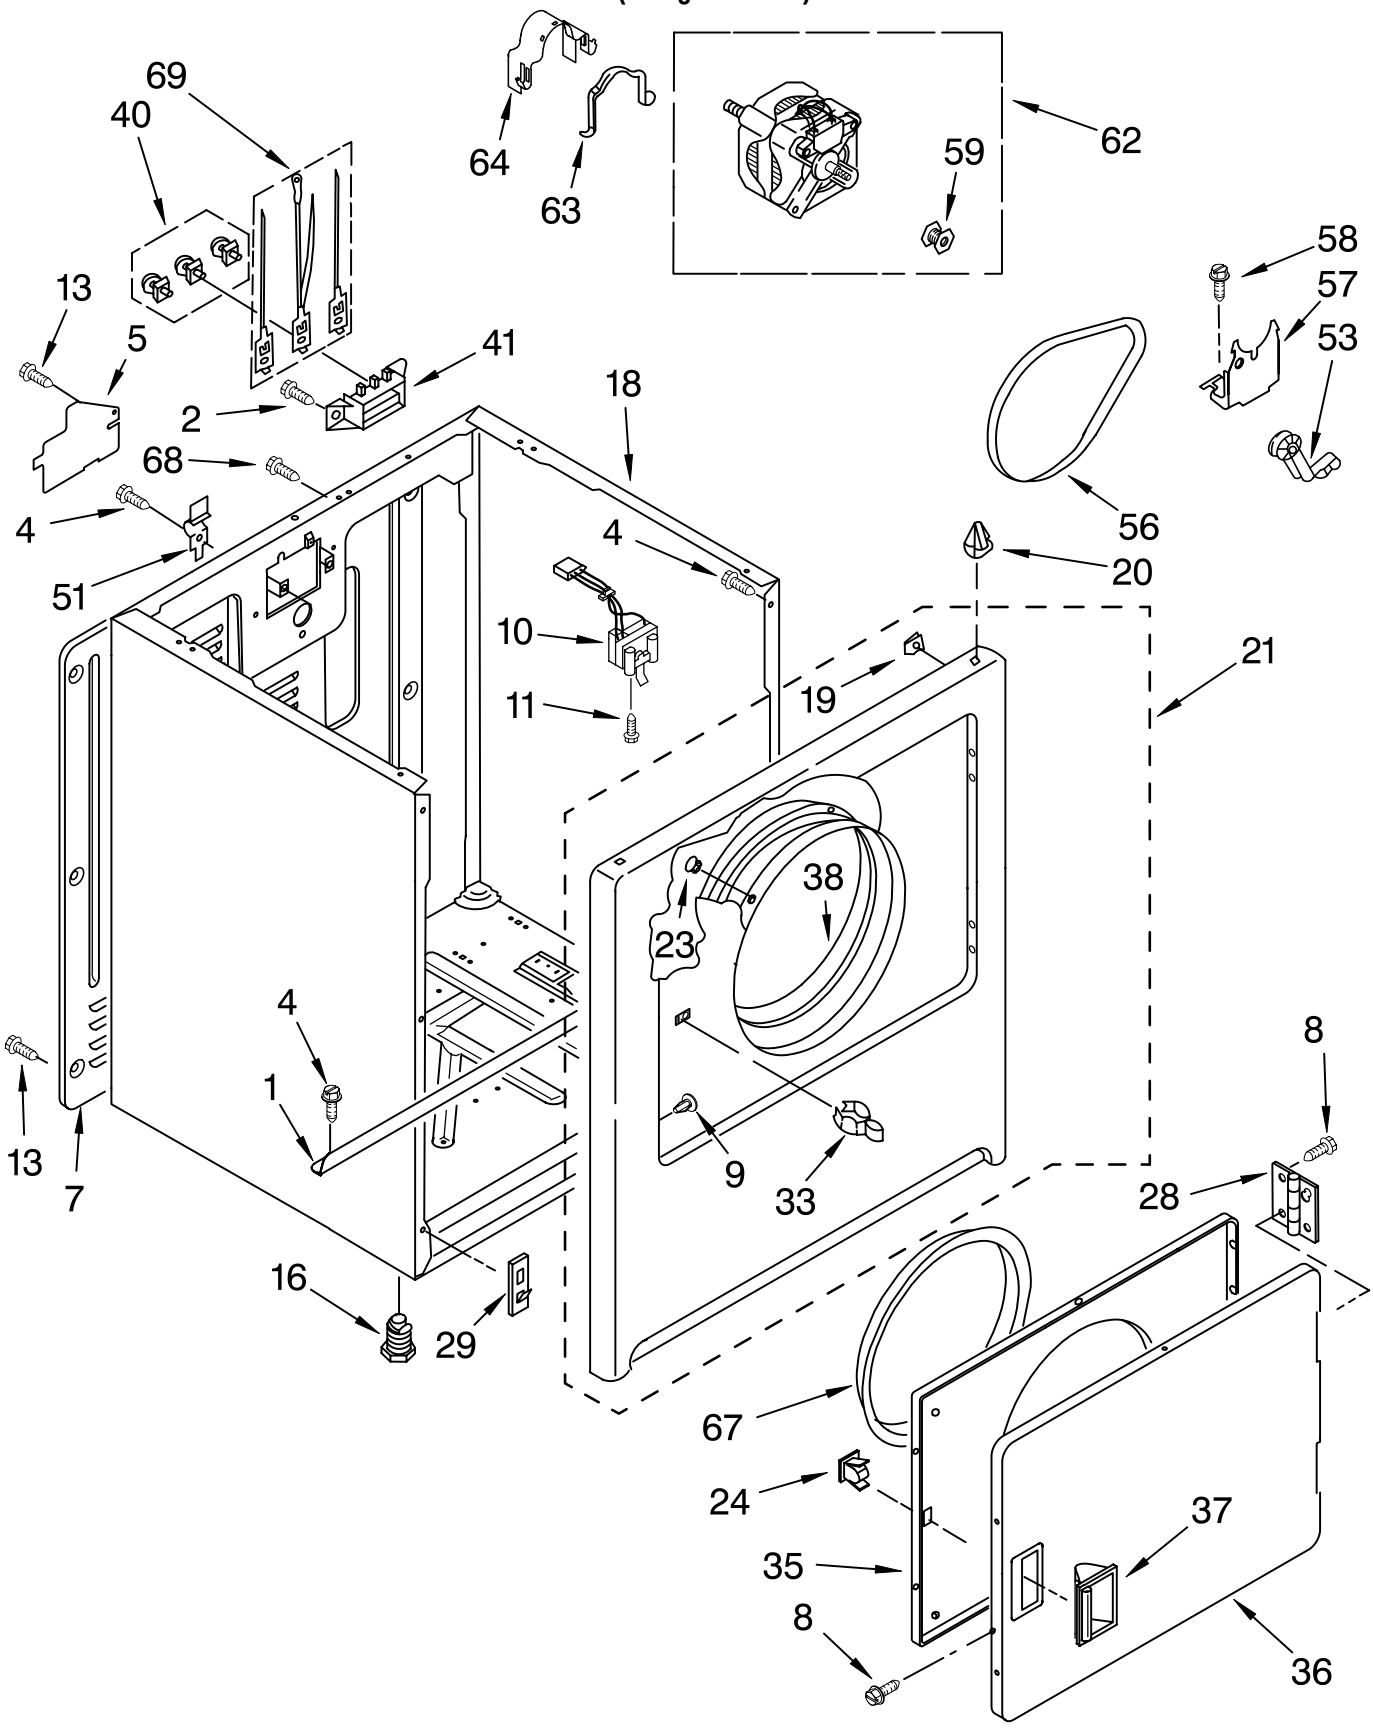

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: TEDX640PQ1
(Designer White)

Illus. No.	Part No.	DESCRIPTION
1	8541400	Bracket, Cabinet
2	3393008	Screw, 10−16 x 1/2
4	343641	Screw, 10−16 x 1/2
5	3396795	Cover, Terminal Block
7	3396807	Panel, Rear
8	342055	Screw, 8−18 x 1/2
9	3404413	Plug, Hinge Hole (4)
10	3406104	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
13	693995	Screw, Hex Washer Head
16	3392100	Foot, Dryer (4)
18	8530603	Cabinet (Includes Illus. 1)
19	98234	Clip, Ground
20	690363	Lock, Front Top (2)
21	3403571	Front Panel Assembly
23	685203	Clip, Felt Pad
24	690081	Catch, Door
28	3405514	Hinge and Pin Assembly (2)
29	3394083	Clip, Front Panel (2)
33	696144	Strike, Door
35	3403371	Door, Rear
36	3403361	Door Front
37	3405184	Handle, Door
38	8066124	Seal & Bearing Assembly
40	279393	Terminal Block Kit For Terminal Block
41	3397659	Block, Terminal
51	238088	Hinge, Top (2)
53	691366	Idler & Pulley Assembly
56	8066065	Belt, Drive
57	348780	Base, Motor
58	3400500	Bolt, 5/16−18 x 3/4
59	3394341	Pulley, 60 Hz.
62	8066206	Motor Assembly 60 Hz.
63	660658	Clamp, Motor
64	3404162	Clamp, Motor (W/Shield)
67	3405245	Seal, Door
68	697776	Screw, 10−32 x 1/2 (External Ground)
69	279318	Terminal, Tinned & Brass (3) (Includes Illus. 40)

BULKHEAD PARTS

For Model: TEDX640PQ1
(Designer White)

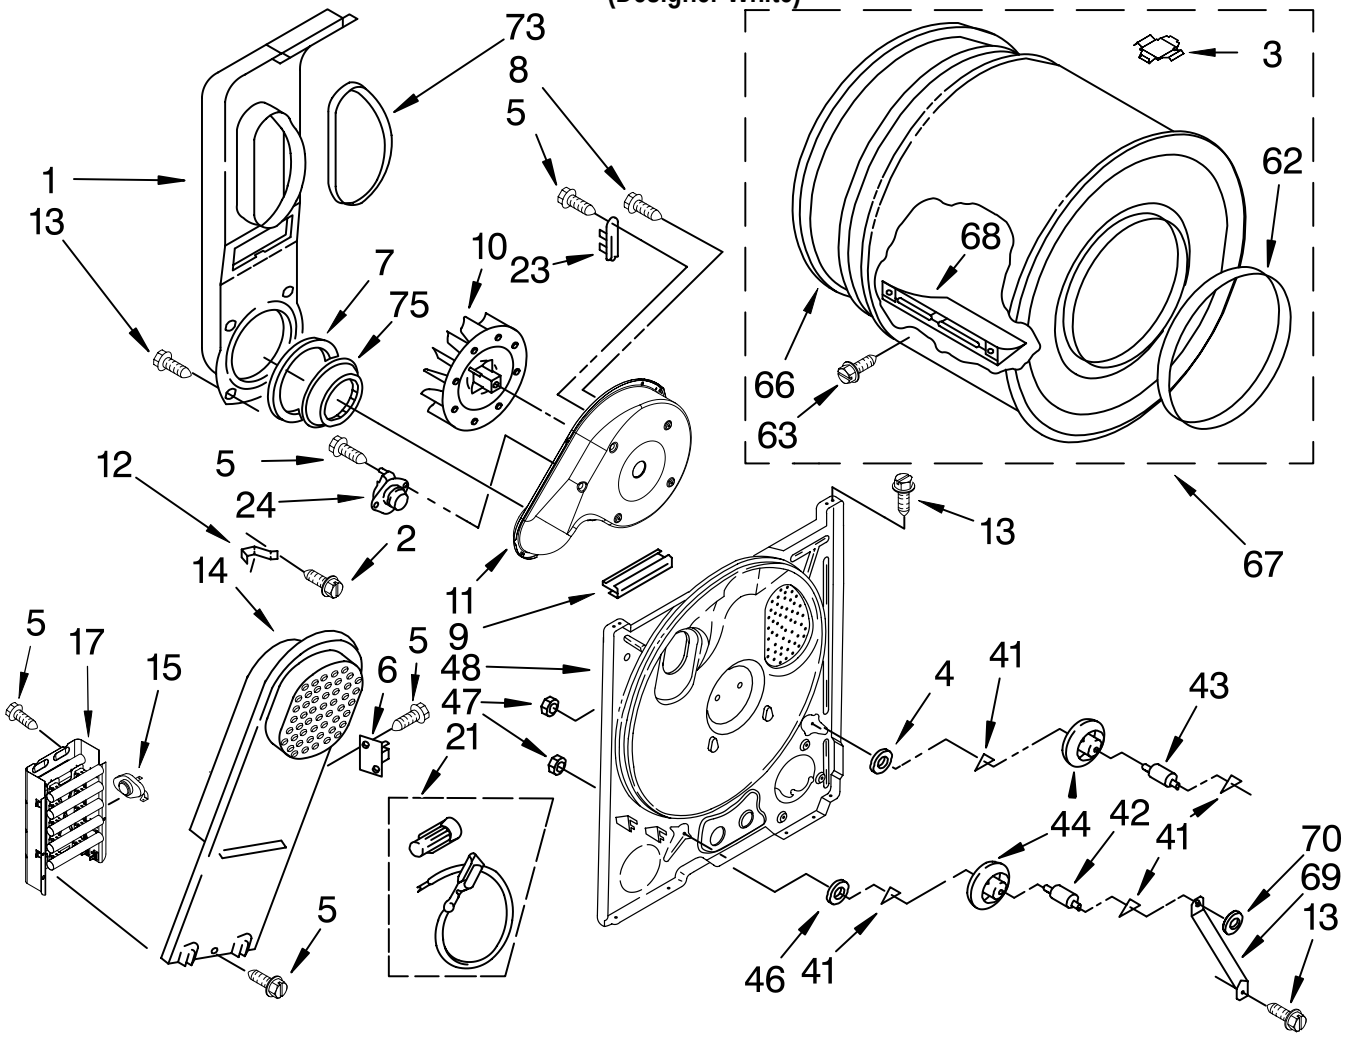

Illus. No.	Part No.	DESCRIPTION
1	694283	Lint Chute Assembly
2	489463	Screw, 8−18 x 5/8
3	8066086	Drum Hole Plug
4	3388703	Washer, Support
5	90767	Screw, 8−18 x 3/8
6	3977393	Thermal Cut−Off (Includes Illus. 15)
7	347139	Seal, Lint Chute
8	3390647	Screw, 8−18 x 1/2
9	3392247	Pad, Blower Housing
10	694089	Wheel, Blower (Includes Illus. 16)
11	8577230	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	8541818	Box, Heater
15	3977767	Thermostat, High Limit 221°F (105°C)
17	8565582	Element, Heater
21	279457	Wire Kit (For Heater Element Wiring Harness Repair)
23	3392519	Fuse, Thermal
24	3387134	Thermostat, Internal Bias
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397590	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	8529955	Bulkhead
62	3394509	Ring, Bearing
63	97787	Screw, 11−16 x 3/4
66	8066085	Seal, Rear Drum
67	3396777	Drum Assembly
68	342847	Baffle, Drum
69	3976435	Bracket, Support
70	90296	Clip
73	339956	Seal
75	696302	Shield, Exhaust

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Model: TEDX640PQ1
(Designer White)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	279948	Kit, Dryer Repair
	689790	Dry Rack
	8522199	Kit, Dryer Vent Testing
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)